

Plug into any empty socket not allocated and note Socket Number

Go to Nearest keypad stand, the display should be lit and show 'Sussex Yacht Club'. Use the keys to Input the following:

Step 1: Key Hash – '#'

Step 2: Display message will change to

– 'Enter ID'

Key your four digit 'Membership Number' followed by '#' e.g. '4321#'

Step 3: Display will message – 'Enter PIN'

Key your four digit PIN Number followed by # e.g. '5432#'

Step 4: Display will message – 'Enter Socket'

Key Socket Number plugged into followed by # e.g. '69#'

Display will message – 'Processing' after which a message show display 'On',



Other possible message:

'Socket Unplugged' check correct socket number and repeat process.

Communication Failure
Contact SYC Office

Step 5: Check Balance

When you are plugged in and socket activated, inputting your Pin followed by * e.g. '7440*' will reveal current account balance

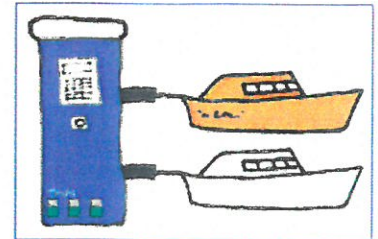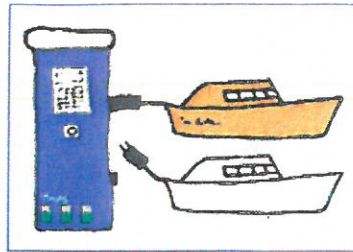

Start
by pressing the
'#' key
and then press
'#' after each keying action

